

WASHING SYSTEM WITH LIQUID DETERGENTS

CHECK LEVEL DETERGENT/DESCALER

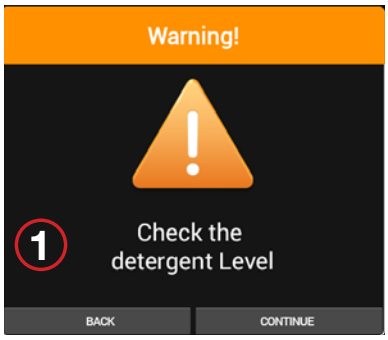


If there is not enough detergent to run the selected wash cycle, a pop-up window will appear on the display telling you to visually check the detergent/descaler level **(1)**.

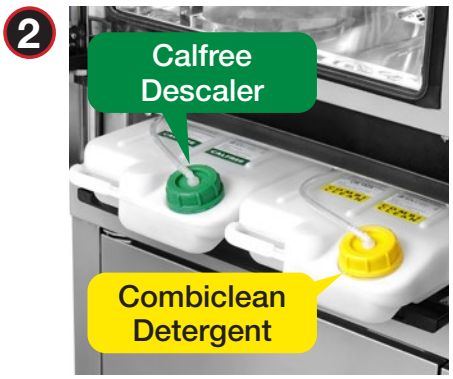

COUNTERTOP MODELS:
Open the oven door and the small door under the cooking chamber and check the quantity of detergent/descaler in the cartridge **(2)**.



FLOOR-STANDING MODELS:
check the quantity of detergent in the canister **(3)**.

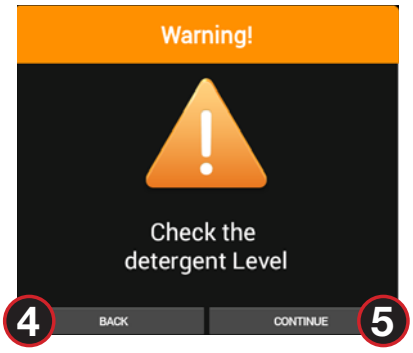


If the cartridge/canister is empty, press “BACK” **(4)** and replace it by following the instructions in the paragraph “REPLACING THE DETERGENT/DESCALER CARTRIDGE” **(5)** before starting the wash cycle.

11 • WASHING SYSTEM

WASHING SYSTEM WITH LIQUID DETERGENTS

REPLACING THE DETERGENT/DESCALER CARTRIDGE/CANISTER

PERSONAL PRECAUTIONS
Avoid exposing skin and eyes by wearing suitable protective clothing and gloves, cat. I (EN 374 standard).
Do not inhale product vapour or powder.

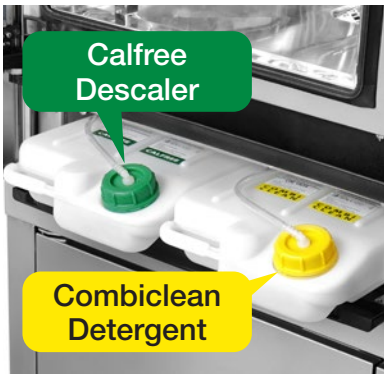

NOTE:

The "**CALFREE**" descaler cartridge has a **GREEN coloured cap**

The "**COMBICLEAN**" detergent cartridge has a **YELLOW coloured cap**



COUNTERTOP MODELS:
Open the oven door and small door under the cooking chamber, unscrew the top of the empty cartridge and remove it (100% recyclable).



Position the new cartridge in its dedicated housing in the oven.

IMPORTANT: Wait for the liquid to stabilise before opening the cap.

Take care not to invert the COMBICLEAN and CALFREE CARTRIDGES.



Remove the top of the new cartridge.

WASHING SYSTEM WITH LIQUID DETERGENTS

REPLACING THE DETERGENT/DESCALER CARTRIDGE/CANISTER




Insert the cap with the extraction system (**YELLOW** for **COMBICLEAN** detergent and **GREEN** for **CALFREE** descaler) ensuring that the clear extraction pipe is facing the front of the cartridge as shown in the figure.





Close the top carefully.

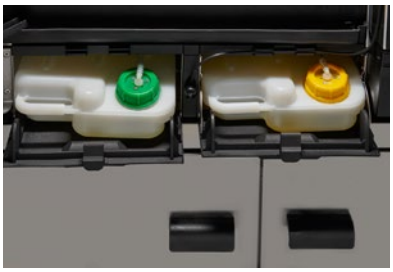

Put the cartridge back in is slot and close the small door and the oven door.

11 • WASHING SYSTEM

WASHING SYSTEM WITH LIQUID DETERGENTS

REPLACING THE DETERGENT/DESCALER CARTRIDGE/CANISTER



FLOOR-STANDING MODELS:
Remove the canister top and insert the pipe with the top (**YELLOW** for **COMBICLEAN** detergent and **GREEN** for **CALFREE** descaler) making sure that it is on the bottom of the canister and carefully close the top.



On the oven display, press the "**SET MAX**" key which corresponds to the **COMBICLEAN** or **CALFREE** that has been replaced.



The indicator now displays the tank as completely full, select the desired wash cycle to start the washing procedure.

WARNINGS
See the safety data sheets of the cleaning products.
In case of skin (or hair) contact with the detergent: immediately remove all contaminated garments. Wash the skin thoroughly under running water with soap. If irritation persists, seek medical advice"
In case of contact with eyes: Remove contact lenses, if present and easy to do. Wash eye immediately with plenty of water. Seek medical advice.
In case of inhalation: Move the person in question away to a uncontaminated area. If breathing stops, perform artificial ventilation and seek immediate medical assistance if necessary.
In case of ingestion: Seek immediate medical assistance. Drink as much water as possible. Do not induce vomiting unless expressly authorised by medical personnel. Show the doctor the safety data sheet of the product ingested which can be found the starter kit for all devices.