Merrychef eikon® e2s and conneX® 12 - panini press installation and usage guide

The NEW Merrychef panini press is an easy to use and install accessory for our 12" cavity high speed ovens, delivering consistent, compressed food with perfect grill marks.

It delivers the simplest to use panini press on the market, with a paddle that slides food between a top grill plate and a bottom plate. When the paddle is removed the grill will lower to compress the food.



eikon® e2s



conneX® 12

Available in 3 panini press kit options, with a high opening for paninis, bagels, subs and sandwiches with either a flat bottom plate or a grilled bottom plate, allowing you to have grill markings on either just the top of the food or the underside as well. There is a low opening for alternative thinner food options such as quesadillas and flatbreads.

- **PSR160 Low opening** panini press with **flat bottom** plate
- **PSR162 High opening** panini press with **flat bottom** plate
- **PSR163 High opening** panini press with **grilled bottom** plate



Accessories included with each model: panini press paddle, low profile cooking tray, x2 cooking liners, red brush, scraper.










Installing and using your panini press

Step 1
Assemble top grill plate onto the grilled or flat bottom plate.

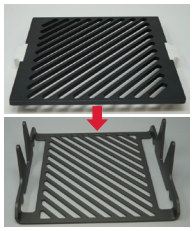

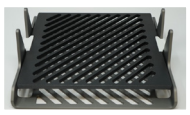

Step 2
Oven must be cold.
Remove the cook plate.
Place the assembled panini press onto the white universal accessory stubs inside the oven.

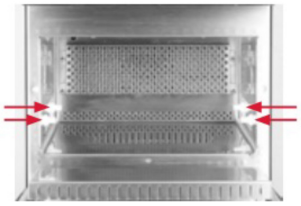

Step 3
Close oven door and preheat the oven to the desired pre-set temperature.

Step 4
Place the approved Merrychef panini press liner or panini press tray onto the panini paddle before placing the required food item onto the liner or tray.

Make sure the paddle surface is clean and dry to allow the liner to easily slide into the press.



Step 5
Open the oven door, and at a slight angle slide the paddle between the top and bottom cook plates letting the top plate lift. Remove the paddle to allow the tray/liner to be released from the paddle, so the food sits between the two cook plates.





Step 6
Close the oven door and select the required cooking program.

Step 7
Once the cook programme has been completed, open the oven door, slide the panini press paddle under the liner or tray to remove the food item.

Step 8
Close the oven door, plate or package the food to serve.

⚠ **CAUTION:** Do not remove the panini press from the oven while it is hot, cool the oven down before removing.

eikon e2s and conneX 12 usage guide 160724JM. ©2024 Welbilt Inc. All rights reserved.

Merrychef eikon® e2s and conneX® 12 - panini press installation and usage guide

Maintaining your panini press

- No cooking oil is needed. The top plate has a nonstick coating, and applying oil will cause the food items to stick to it.
- If products do stick release with a non-metallic utensil to avoid scratching the coating.
- Do not cut on liners or trays.
- Clean liners and trays after use to prevent cross contamination and extend the life of the accessory.
- Do not use the regular Merrychef cooking paddle for the panini press, it will not fit and will damage the press.
- Avoid hitting stubs the white cavity stubs when inserting and removing the panini press, do not throw or drop in the sink.
- Check the white cavity stubs that the panini press rests on, after prolonged usage these may become damaged and will need replacing. (Item number PSA2231A can be replaced and installed by an engineer).
- Check the white side guides, after prolonged usage these may become damaged and will need replacing. (Item number DRO397 can be installed without an engineer).



- Clean the white side guides regularly so they do not become susceptible to microwave absorption and potentially melt.
- Clean the panini press daily, following the correct procedure shown in the panini press cleaning video, and the instructions included in the box.

Consumable parts

To be ordered from your approved Merrychef service agent or equipment supplier.



32Z4189
Red brush (hard bristles)



32Z4191
Scraper




DR0397
White side guide



PSA2231
Stub, nut & screw x1



PSB1207
Stub, nut & screw x4

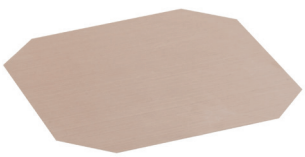

32Z4153
Panini press liner



32Z4186
High profile (black) tray
compatible with
PSR163 & PSR162 ONLY



32Z4198
Low profile (black) tray
compatible with
PSR163, PSR162 & PSR160

MERRYCHEF®

For further details on where to buy, how to service and for our flagship culinary support please visit **www.merrychef.com**

eikon e2s and conneX 12 panini press install and usage guide 160824MS. ©2024 Welbilt Inc. All rights reserved.