MERRYCHEF®

Cleaning kit: Merrychef eikon® and conneX® ovens

Your cleaning kit contains:

- Pipe cleaner
- Red brush (hard bristles)
- Red scraper
- x3 non-abrasive sponges
- x2 pink cloths
- x1 blue cloth
- Micro brush
- Merrychef® Oven Cleaner
- Merrychef® Oven Protector

Recommended tools (not supplied):

- Eye protection
- Heat proof gloves (optional)
- Dust mask (optional)
- Paper towel




IMPORTANT:

A daily cleaning routine will ensure that you comply with the required hygiene standards, as well as help maintain the efficiency of your Merrychef oven.

It is very important to cool down the oven before cleaning.

This sheet offers a general guide on using the contents of your cleaning kit. Scan QR code to watch cleaning instructions specific to your oven model.


Pipe cleaner (for steam vent)

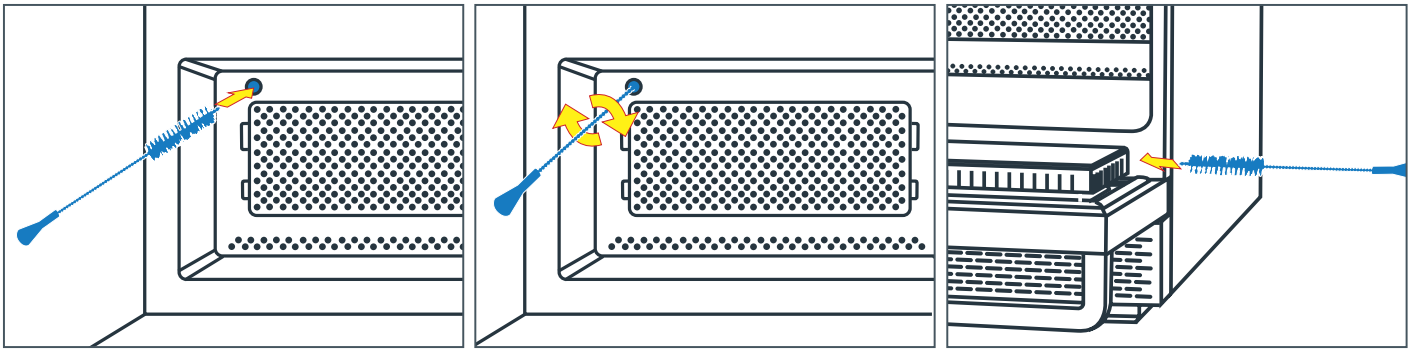

conneX 12e, 12, 16 and eikon e1s only: Use the pipe cleaner brush to clean out the steam vent pipe. Push it into the steam vent pipe until it stops, rotate, and pull out to remove. Repeat 2-3 times. This will help remove any built up grease in the vent.


The pipe cleaner should also be used to clean the gap between the oven cavity and the internal door hinges. **Do not use the pipe cleaner on the door seal**.

Red brush (for food particles)

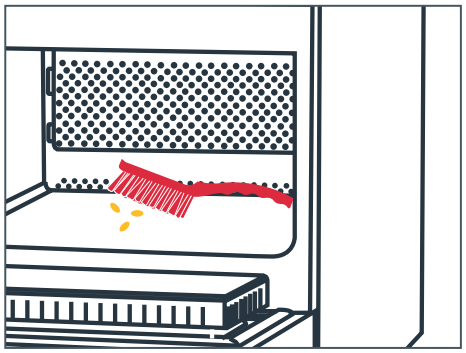


Use the red brush to remove loose food debris from the oven, internal cavity and accessories. **Do not use on a hot oven**.

Non-abrasive sponge (for applying chemicals)

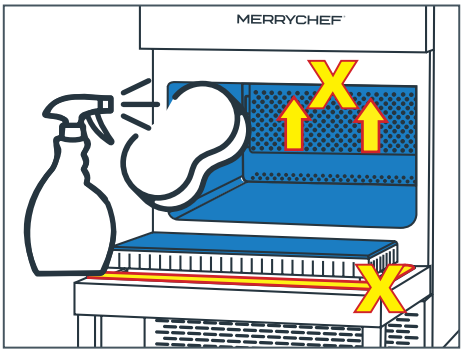

Spray Merrychef approved cleaner onto a non-abrasive sponge and use the sponge to gently press the cleaner onto the sides of the inside of the oven, the back, the base and the oven door. Avoid the roof and door seal. Use the same method to apply protector after cleaning.
After use, rinse the sponge in warm soapy water and air dry.

Scraper (for baked on food/grease)

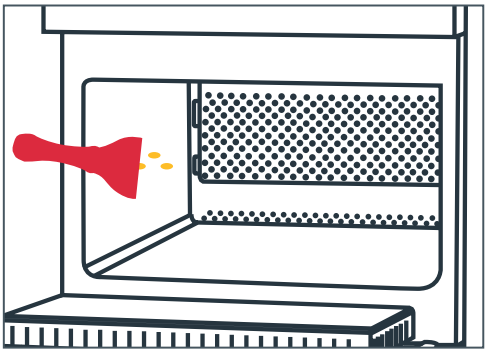

For difficult areas, leave cleaner to soak for 10 minutes with the oven door open. Use the red scraper to dislodge any baked on food in the cavity then clean the cavity using a sponge. Again, avoid the roof and do not scrub the door seal.


Do not spray directly into the cavity.
Avoid the roof and door seal.
Do not use protector on the cook plate.

Cleaning starter kit guide ©2024 Merrychef. All rights reserved. 230724JM

MERRYCHEF®

Cleaning kit: Merrychef eikon® and conneX® ovens


Pink cloth (for cleaning oven)

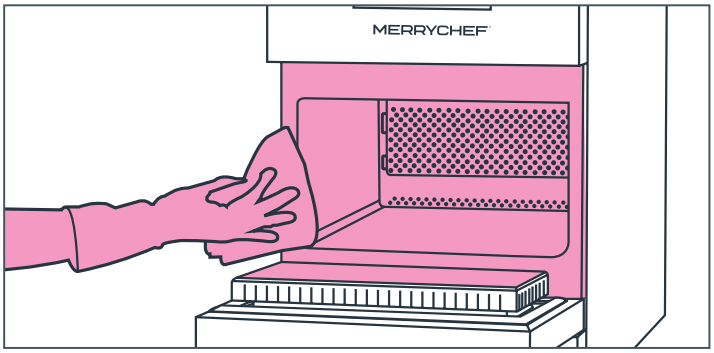

The pink cloth (dampened) can be used to wipe oven and internal cavity areas. Rinse cloth and repeat until the Merrychef oven cleaner has been removed.


⚠ Avoid the roof and door seal.

Blue cloth (for wiping oven)

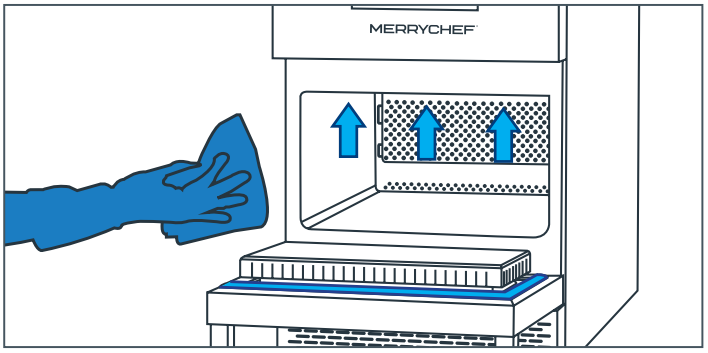


The blue cloth (dampened) can be used to wipe door seal and oven roof.

Microbrush (for cleaning under door choke)

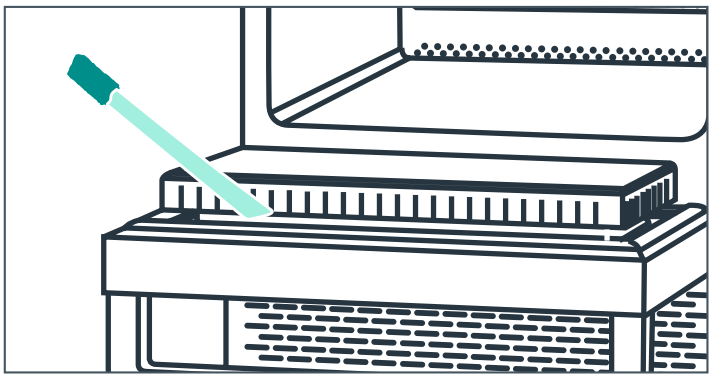

To dislodge built up grease and food debris under the door choke plate, use the scraper end of the micro brush.

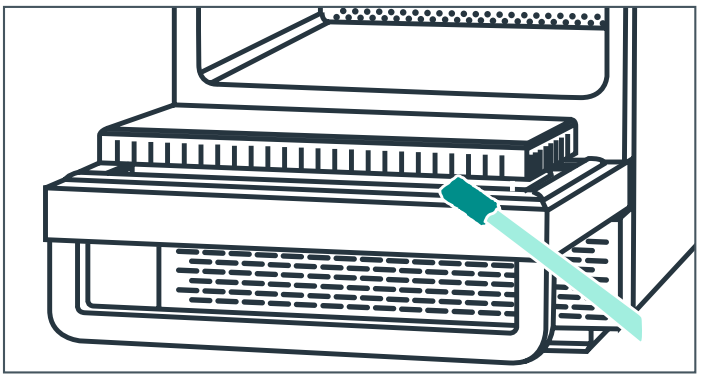

Use the brush end of the micro brush to clean between the door seal and choke plate.

Oven cleaner and protector



Our specially formulated cleaner is non-abrasive and, if used regularly, will quickly cut through any grease or food debris built up on your Merrychef oven. After cleaning we recommend you thinly coat your oven with the Merrychef oven protector to provide a barrier against further build-up of grease and make regular cleaning quicker and easier.

⚠ Do not spray directly into the cavity.
Avoid the roof and door seal.
Do not use protector on the cook plate.

For more guidance on cleaning please visit
www.merrychef.com/videos

For further information visit
https://www.merrychef.com/Products/Accessories-Merrychef#Cleaning-Accessories

Cleaning starter kit guide ©2024 Merrychef. All rights reserved. 050824JM