the eggcheff

Quick Start Guide

V1 - 2026 - FEB

IMPORTANT SAFETY NOTICE

Reading this Quick Start Guide does not exempt the user from the obligation to read the full Operating Instructions. The complete manual contains critical safety warnings and detailed procedures essential for safe operation.

1. Installation & Start-Up

Parts





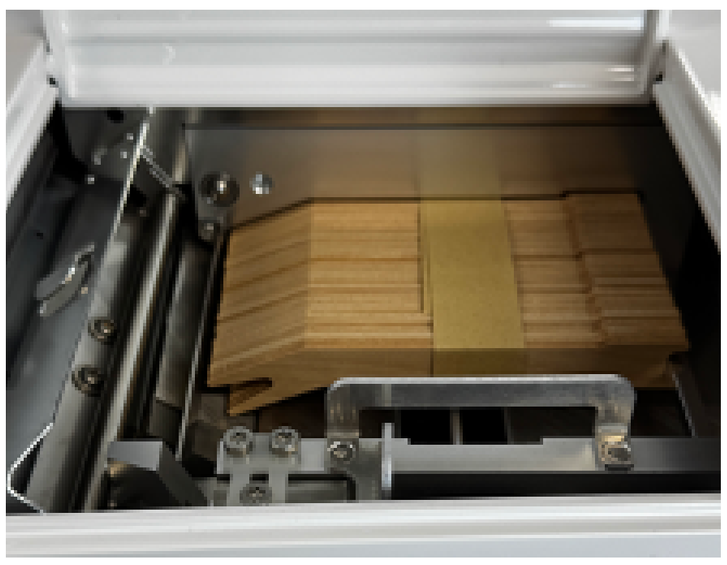

Fork reservoir



Cup holder



Reusable fork



Reusable cup



Drip tray



Single use fork



Kraft paper cup

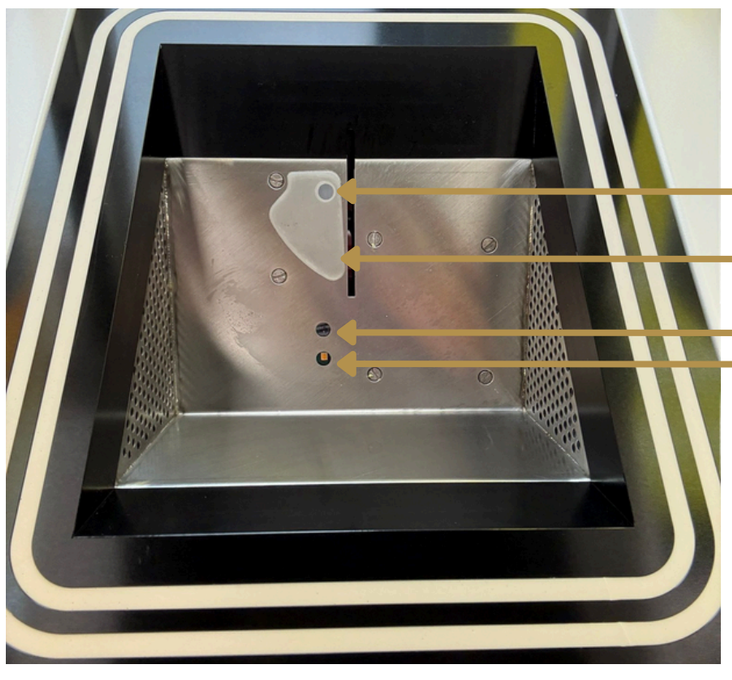

Inside cavity

Download manual here

Step by Step

1. **Placement:** Place the machine on a stable, horizontal, and heat-resistant surface.

2. **Power Connection:** Ensure the power cable is firmly plugged into a grounded working socket.

3. **Power On:** Press the power button to turn the machine on.
   Note: The lid wil automatically open when the device is switched ON.

4. **Language:** Select your preferred language on the home screen by pressing the language button.

5. **Factory Setting:** When first turned on, the machine is set to the cooking program: Preset 2 with a 20-second After Cooking Time. For more information about the cooking settings, see Chapter 3.

2. Preparation: Forks & Dosing

Refilling the Fork Reservoir

Use only the provided reusable or single use forks.

1. Open the fork reservoir
2. Place the back of the forks against the guide rod (1).
3. Correct alignment: Ensure the notch/tines at the front of the fork are positioned exactly as shown in the technical illustration (2).
4. The pusher (similar to a stapler mechanism) must be pressing on the forks so they align correctly under the arch and are pushed into position (3).
5. Close the fork reservoir. The forks are now ready for use.

Technical illustrations can be found on the next page.

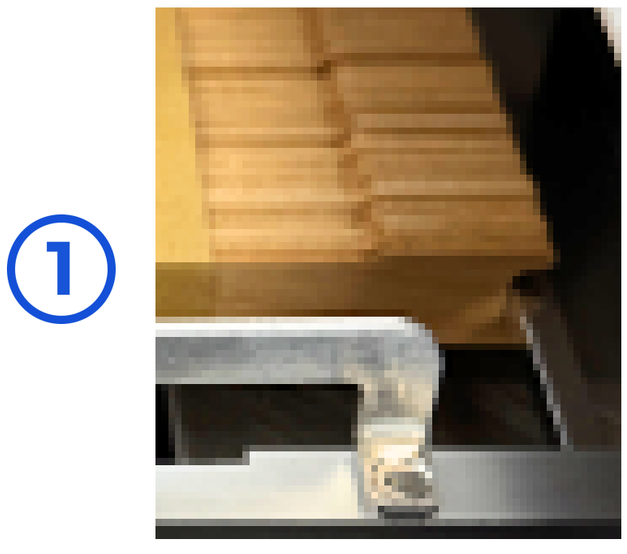

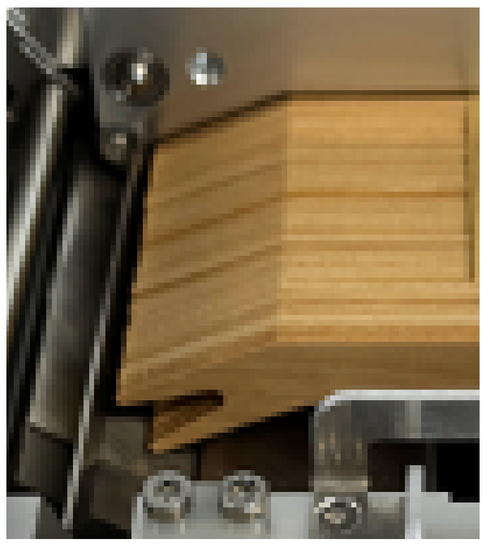

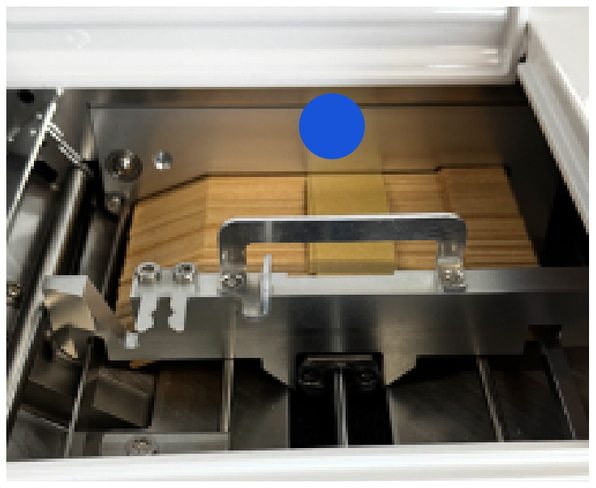

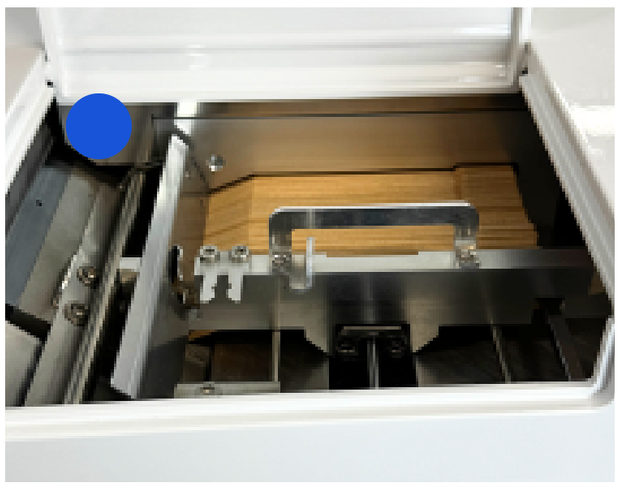

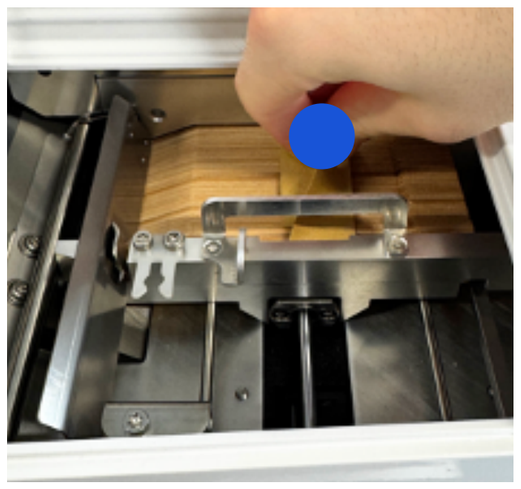

Preparing the cup

Use only the provided reusable or kraft paper cups.



- **Filling level:** It is recommended to fill the cup with between the MIN and MAX FILL line.
  If you prefer a fuller cup or frequently see a “Fill Level Too High” warning, adjust the MAX FILL LEVEL in the Maintenance Menu to allow more egg mixture in the cup.

Note: Adjusting this setting may cause the egg mixture to overflow from the cup and create a mess. Always test the setting with the specific type of egg mixture you are using.



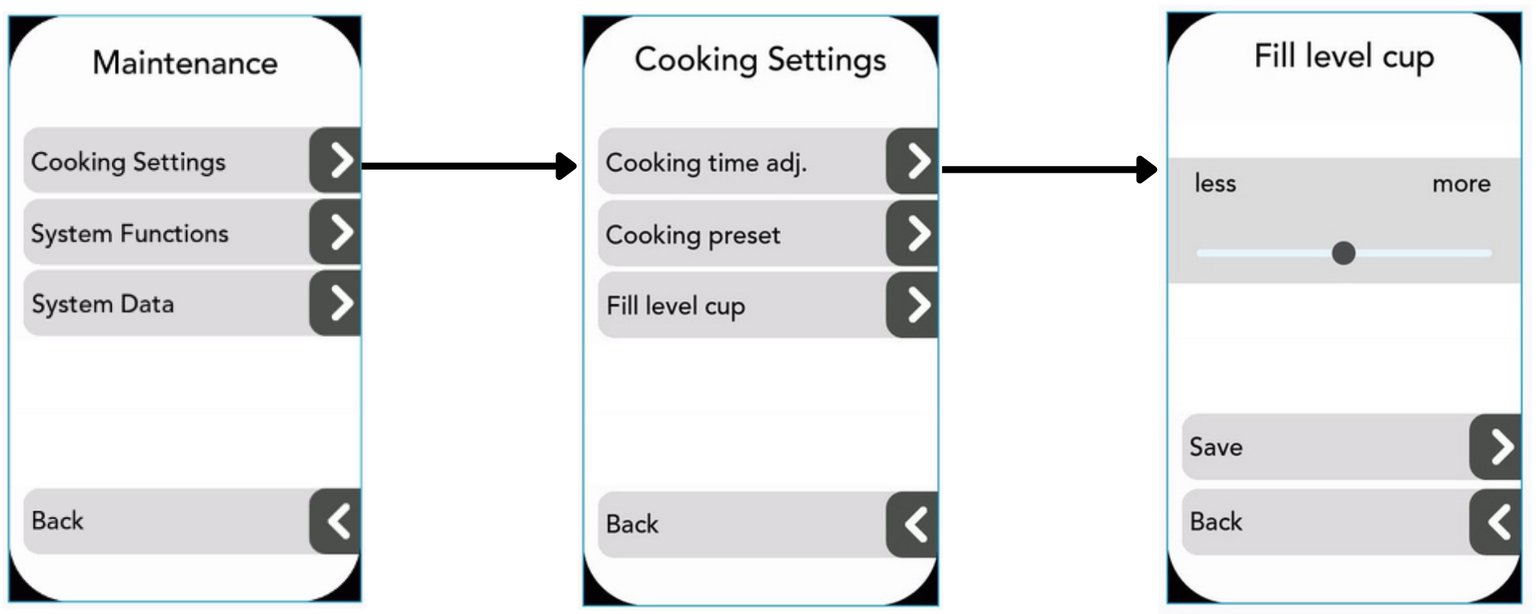

3. Cooking Settings & Presets

Presets

Egg Mix Type	Brands (e.g.)	Preset	Cup Type	After Cooking Time
Whole Egg Mix (pasteurized)	Eggstra, Eipro, Gustovo, Cocovite	1	Paper Plastic	11 - 14 sec 16 - 19 sec
Egg Whites Mix (pasteurized)	Eipro	1	Paper Plastic	15 - 18 sec 18 - 21 sec
Scrambled Egg Mix (pasteurized)	Eggstra, Bravoour, Eipro, Lüchinger, Cocovite	2	Paper Plastic	11 - 14 sec 16 - 19 sec
Other Egg Mix (pasteurized)	Gustovo Scrambled	3	Paper Plastic	Start at 10 sec Start at 15 sec

What is After Cooking Time?
This is the duration the egg continues to cook inside the machine after the main cycle. For a drier result, increase the After Cooking Time; for a moister result, decrease the After Cooking Time. This can be done via the 'Cooking Time Adjustment' menu.

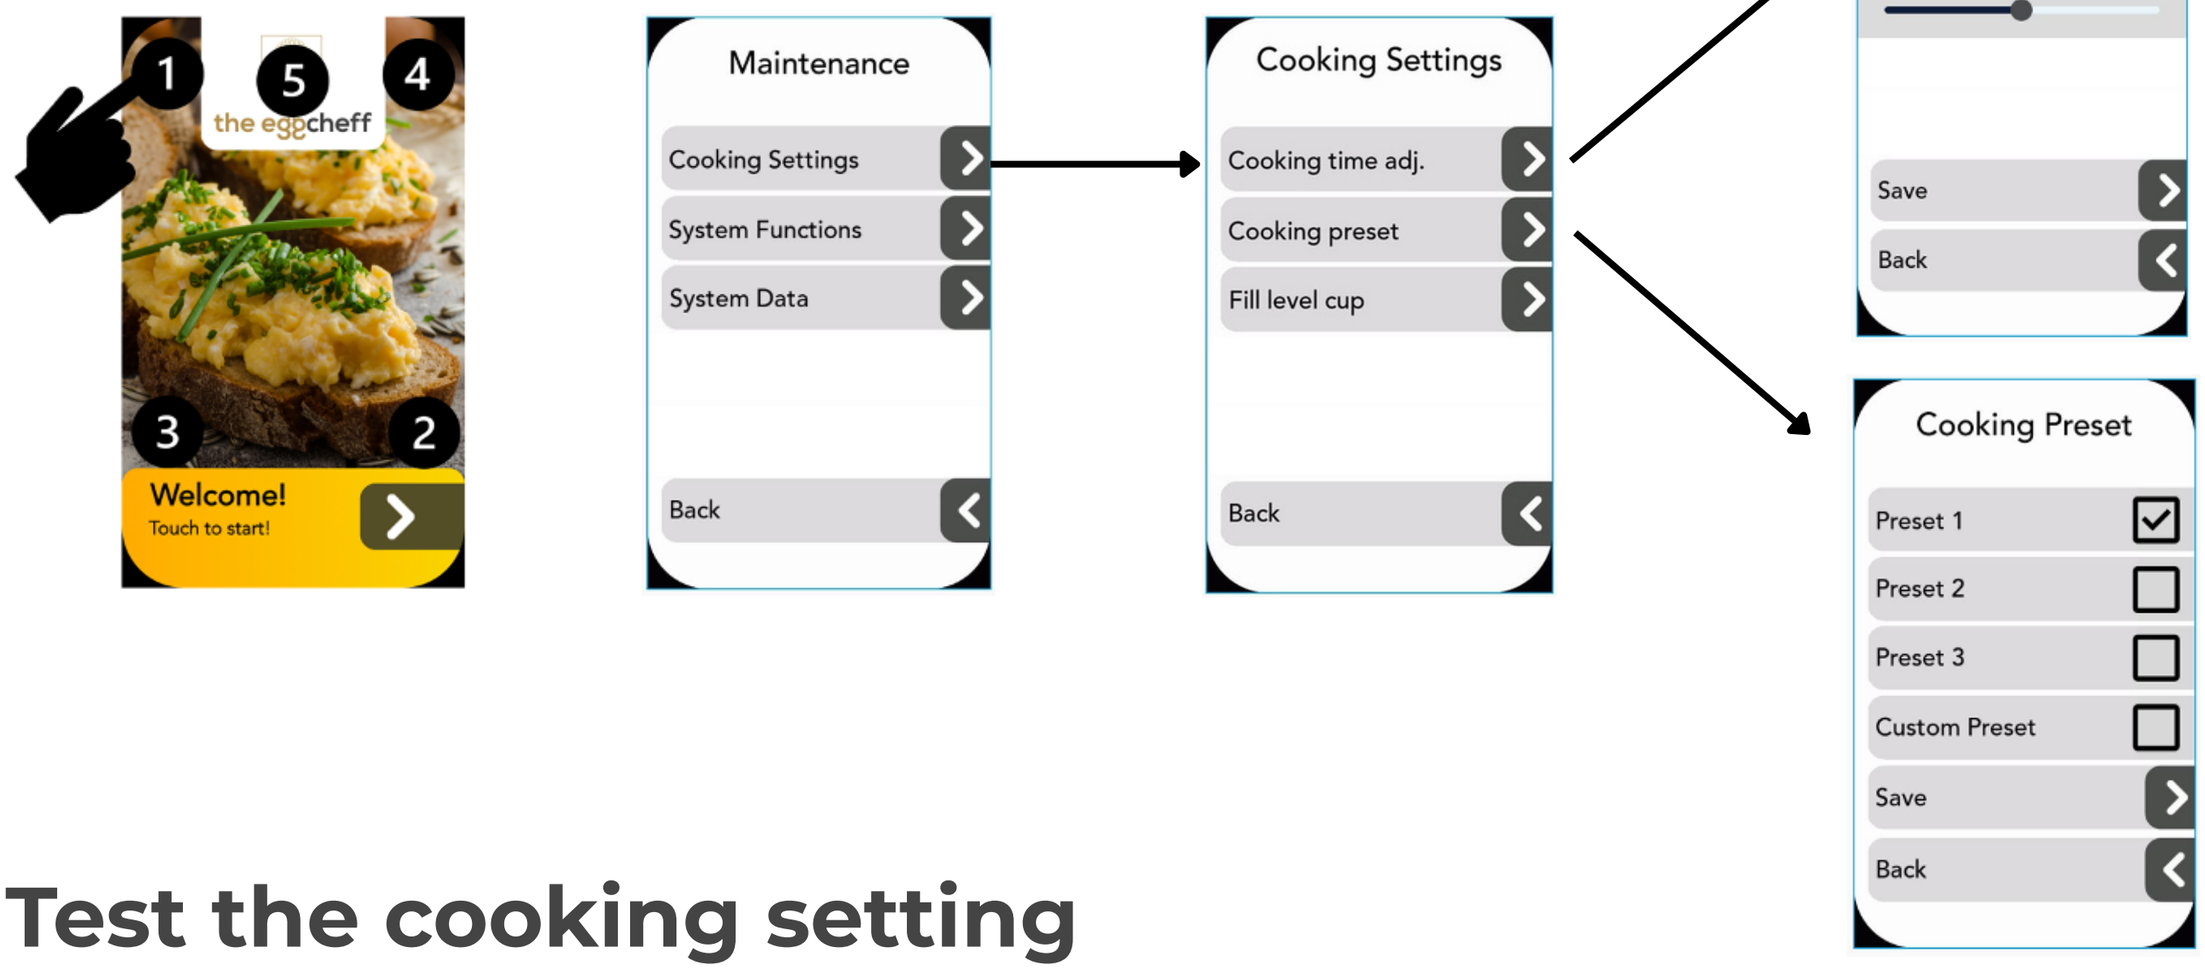

Test the cooking setting

- After setting the preset and the After Cooking Time, test your egg mixture three times with the same amount of egg.
- Once you have saved the preset and After Cooking Time, these settings will remain stored.

4. Daily Cleaning & Maintenance

1. **Power Off:** Turn the machine off before cleaning.
2. **Removable Parts:** Clean the drip tray and cup holder.
3. **Interior Cavity:** Carefully wipe the upper cavity area, sensor foil, and temperature sensor with a soft damp cloth.
4. **Cleaning sensors:** Roll a small piece of tissue paper as shown in image below (4) and clean the sensor openings.
5. **Touchscreen:** Wipe the screen and exterior surfaces with a soft damp cloth.

Place drip tray and cupholder back in the machine before turning on The Eggcheff.
In case of any abnormalities found, contact your reseller.

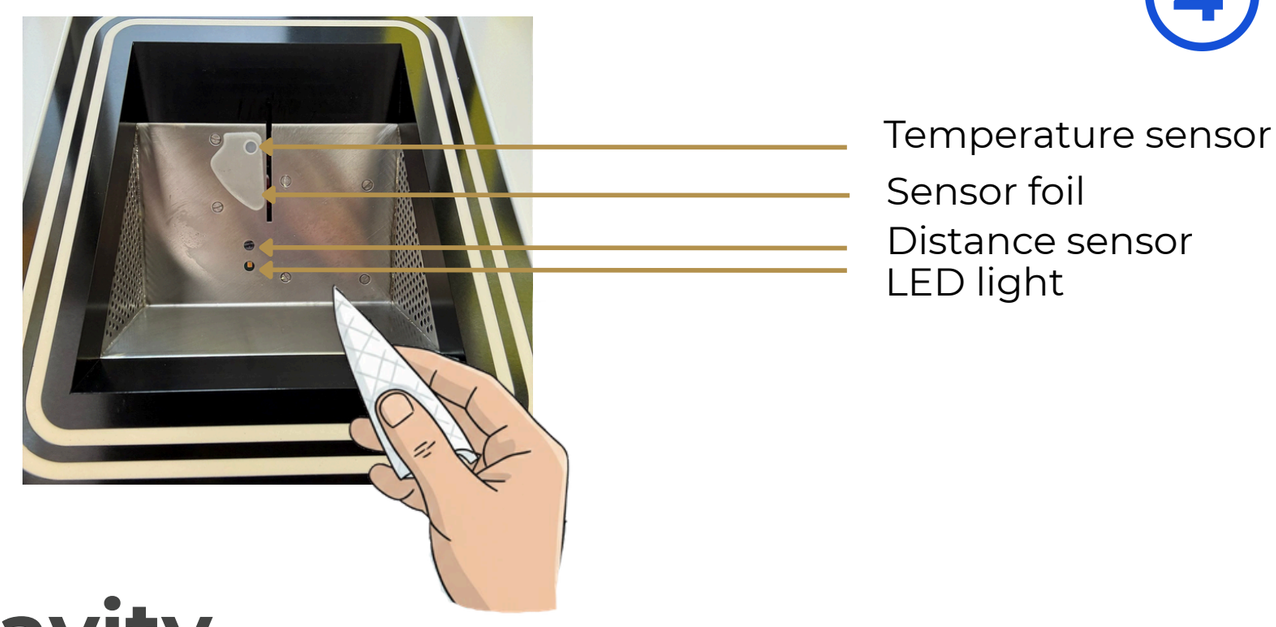

Closing & locking the cavity



Touch the 1-5 sequence to enter maintenace menu



Touch ‘System Functions ‘

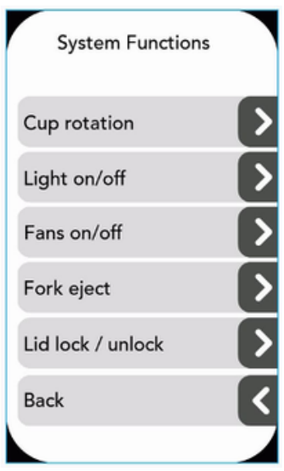

Touch ‘Lid lock / unlock ‘



Pull lid down



Turn off (lid in closed position)

When turning The Eggcheff ON, the lid will automatically open.

5. Troubleshooting

Problem	Possible Causes	Solution
Device cannot be switched on	Power cable not connected	Make sure that the mains cable is firmly plugged into a working socket.
When starting, the touchscreen remains on the loading screen. (wait at least 60 seconds)	Lid not pushed all the way up	Push the lid upwards until it is at the top.
Fork does not come out of the fork system.	Wrong fork used	Only the forks supplied with the machine can be used.
	Fork reservoir filled incorrectly	Check that the forks have been refilled in accordance with the instructions in Chapter 2.
	The fork is jammed	Switch off the appliance and try to remove the fork from the inside of the cavity or from the outside of the fork reservoir. Remove all forks from the fork reservoir and remove the stuck fork. Ensure that all parts have been removed, refill the machine with forks and switch the appliance on. The fork mechanism will automatically reset.
'Fill Level Too High' error occurs multiple times.	The distance sensor is not clean	See step 3 in Chapter 4: Daily Cleaning & Maintenance

Need help?
Scan the QR code for instant support, instruction videos, and solutions.

Chat with us



the eggcheff

Contact
info@theeggcheff.com
www.theeggcheff.com